

ADSL Router Login

الدخول لمتصفح google chrome وتسجيل ip
الراوتر بالبحث 192.168.1.1

User Name:

Password:

Status

Quick Start

Setup

Advanced

Service

Firewall

Maintenance

▶ Quick Start

▶ Quick Start

This Modem Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the Modem router to connect to your ISP (Internet Service Provider).

2

START

EXIT

- Quick Start
- Quick Start

Quick Start

The Wizard will guide you through these four quick steps. Begin by clicking on NEXT.

- Step 1. PVC Auto Searching
- Step 2. Set your Internet connection
- Step 3. Wireless network configuration
- Step 4. Save settings of this ACIS Router

3

NEXT EXIT

netis® Select Language: English

Status **Quick Start** Setup Advanced Service Firewall Maintenance

Quick Start
Quick Start

Quick Start-DSL Setting

Enable PVC Auto Search: Searching

PVC Auto Search Results

VPI	8	(0-255)
VCI	35	(0-4095)

BACK NEXT EXIT

4
5
6

> Quick Start

> Quick Start

7

Quick Start---ISP Connection Type

Select the Internet connection type to connect to your ISP. Click NEXT to continue

- | | |
|--|--|
| <input type="radio"/> Dynamic IP Address | Choose this option to obtain a IP address automatically from your ISP. |
| <input type="radio"/> Static IP Address | Choose this option to set static IP information provided to you by your ISP. |
| <input checked="" type="radio"/> PPPoE/PPPoA | Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users) |
| <input type="radio"/> Bridge Mode | Choose this option if your ISP uses Bridge Mode. |

BACK

NEXT

EXIT

8

➤ Quick Start

➤ Quick Start

Quick Start---PPPoE/PPPoA



Enter the PPPoE/PPPoA information provided to you by your ISP. Click NEXT to continue

Username:

@waves.sy

9 @waves.sy

Password:

***wg

Connection Type :

PPPoE LLC ▾

10

BACK

NEXT

EXIT

11

- Quick Start
- Quick Start

Quick Start--Wireless Setting

You may enable/disable Wireless, change the Wireless SSID and Authentication type in this page. Click NEXT to continue.

Access Point: Activated Deactivated 12

SSID: username

Broadcast SSID: Yes No

Authentication Type: 13

Password: Please enter ASCII characters between 8 and 63 or hexadecimal characters between 0 and 64. 14

password

BACK **NEXT** EXIT

15